


ADJUSTING THE HOPPER MK 4.5 - 4.6

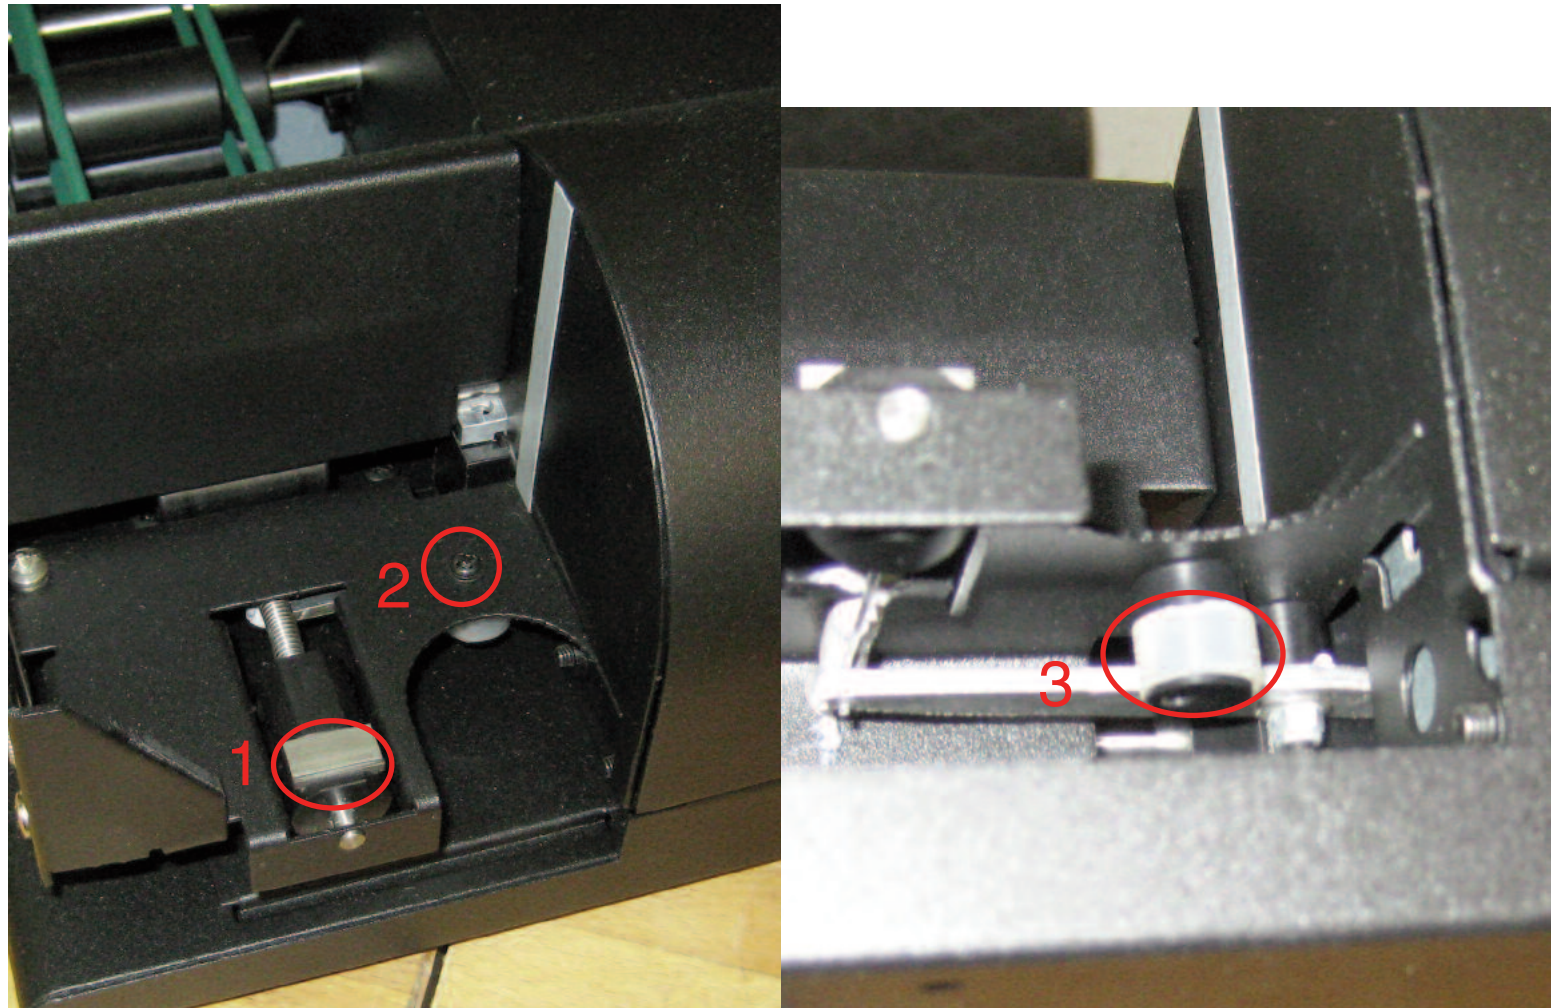

The distance between the rear end of the cards and the “heel” on the shuttle picking the cards from the hopper needs to be correctly adjusted.

1

Check that the aforementioned distance is about 1-1.5 mm.

2

Untighten (NOT remove) the little black screw at the bottom of the hopper.

3

Adjust the eccentric that sits under the bottom of the plate. Tighten the little black screw (2) when you have the right distance (1).

The hopper also needs to be adjusted to the length of the cards. There should be room for 2 (upright standing) cards on the side of the card stack in the hopper.

The hopper is adjusted with the knob on the front panel (encircled in illustration).

