


Cardpath

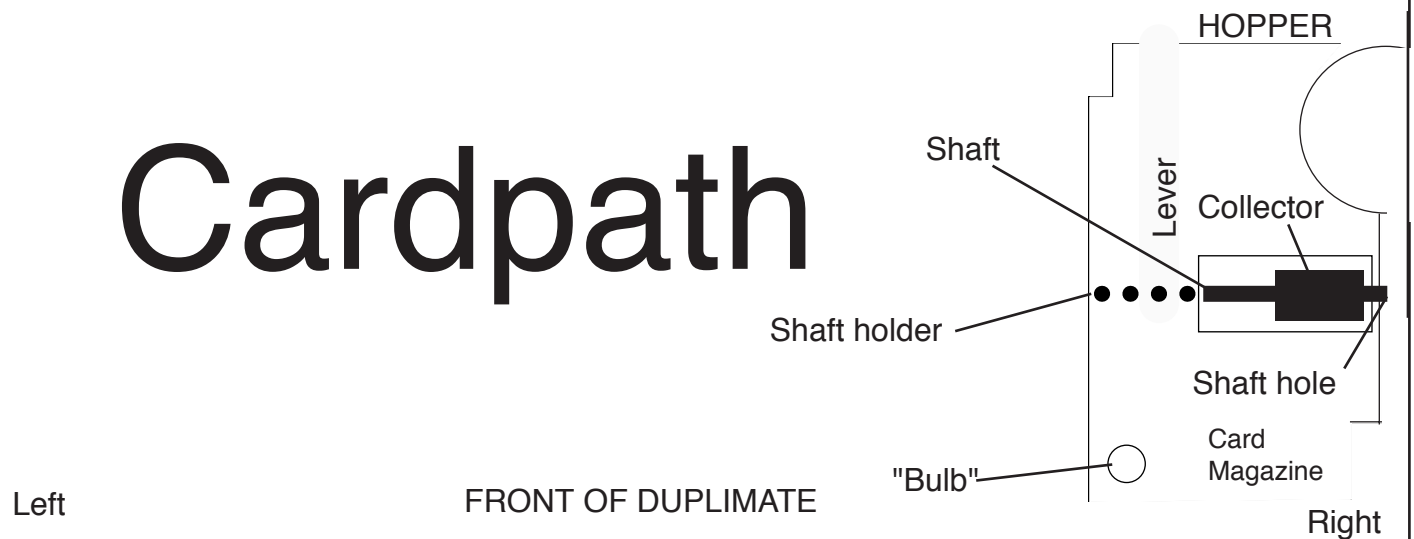


Upgrading of the collector

To dismantle:

1. Release the U-shaped metal thread linking the collector to the lever (without bending the lever).
2. Compress the whole package (push the collector to its left-hand position).
3. Hold the compressed collecting ram with a pair of tongs and move it to the right hand side. When the shaft has left the shaft holder, the package will spring loose.

To mount:

4. Put the new collector with the spring onto the shaft.
5. Hold the compressed collector package with a pair of tongs (from above, via the magazine).
6. Insert the collector package into the right hand side shaft hole. Put the left hand side's end of the shaft into the shaft holder with the opening of the locking ring upwards.
7. Mount the U-shaped thread (without bending the lever).
8. Replace the old plastic "bulb" with the new.
9. Mount the card retarder (basically a piece of self adhesive plastic foil) in the following way:
 - a. Clean the surface of the card magazine to the left of the collector with pure alcohol (vodka will do).
 - b. Peel off a little bit of the foil covering the self adhesive tape.

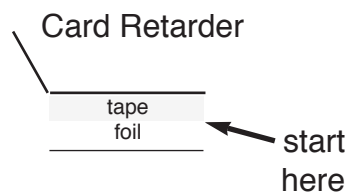

- c. Align the end of the adhesive tape with the hole for the collector.
- d. Peel off the remaining part of the foil covering the adhesive tape.

